Replacing the Printhead

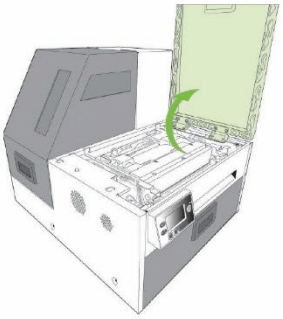

1. Open the printer top cover.

2. On the control panel, select ⚙ (Config) > Printhead > Replace. Wait for the printhead latch to be released, then open the latch fully.

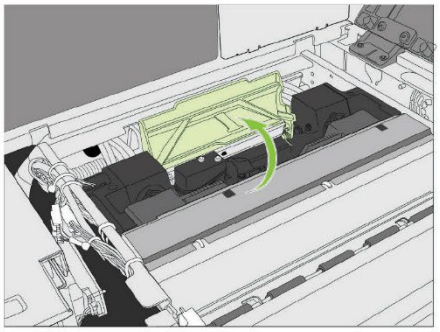

Do not open latch before it is released!

3. Hold the printhead by the handle and push it toward the printhead latch. Once the printhead is released, lift it out of the printer.

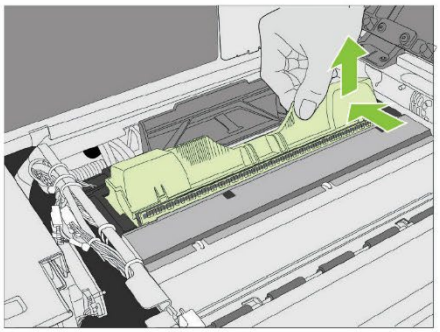

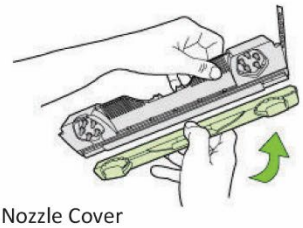

Replace the Nozzle Cover onto the removed printhead.

NOTE: Dispose of the old printhead according to local regulations.

4. Remove the new printhead from its packaging.

Do not touch the ink couplings, electrical contacts, or nozzles.

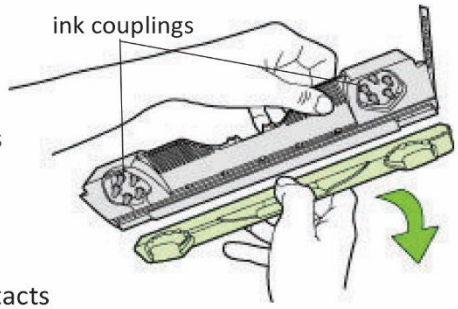

Do not discard the cover!
It should be replaced if the printhead is removed from the printer.

Slowly remove tape from electrical contacts

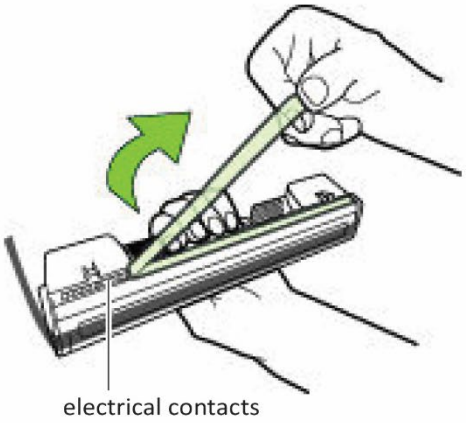

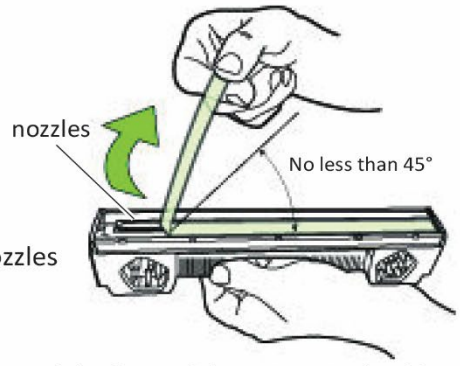

Slowly remove tape from nozzles

5. Slide the printhead into the slot. Push it toward the front of the printer. It should snap into place.

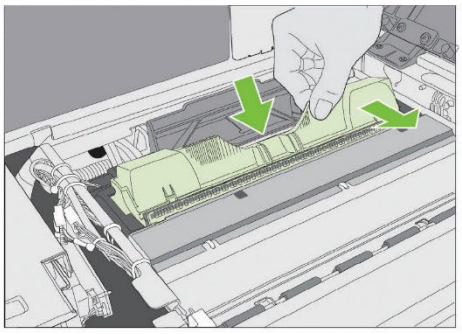

6. Close the printhead latch.

   Check that ink is flowing through the tubes on both sides of the printhead (circled above).

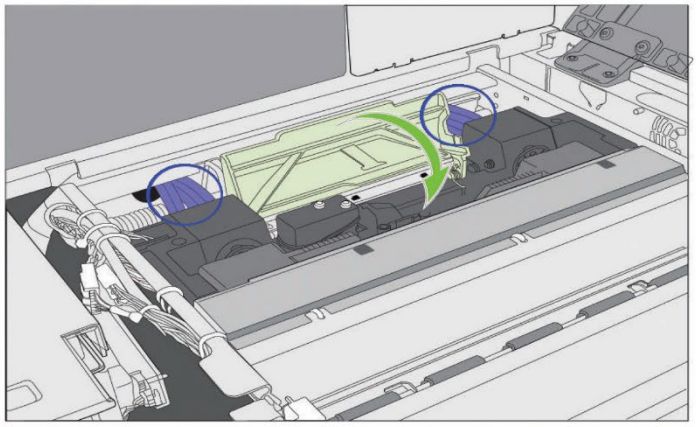
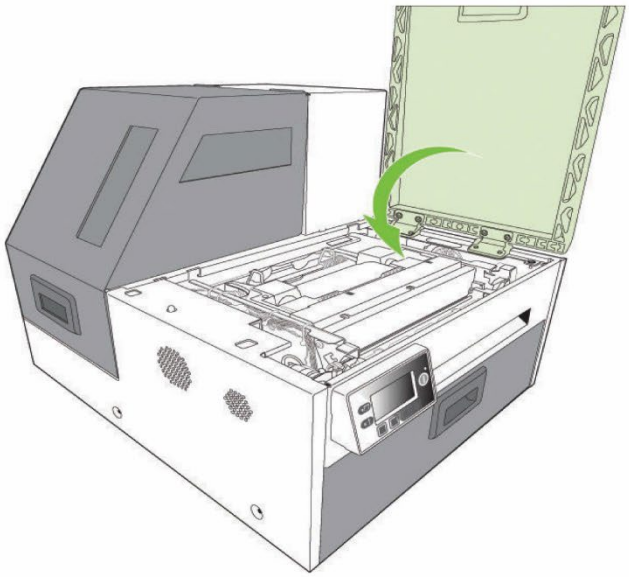
7. Close the top cover.